

## ***Stay prepared with this family emergency tool***

The perfect addition to any family's or individual's emergency toolkit, the Portable Emergency Radio helps you with any number of needs you may have when disaster strikes.

The Portable Emergency Radio features an Alert function that lets the user know when the National Weather Service issues imminent weather or civil emergency warnings in your area.


Its hand crank and solar panel make it easy to keep the LED flashlight, siren and radio charged up. A USB-compatible cell phone charging port is also included to make mobile communications easier. An AM/FM radio also includes weather band channels to get 24/7 emergency updates from the National Weather Service and other emergency agencies.



## Features

- Digital AM/FM Radio
- Weather Band Channels
- NOAA Weather Radio Alert Function
- Features hand crank & solar panel for supplemental charging
- Cell Phone Charging Panel via USB
- LED Flashlight with Beacon setting
- Emergency Siren
- Digital Alarm Clock
- MP3 Line-In Function

# WR202 Weather Radio Setup

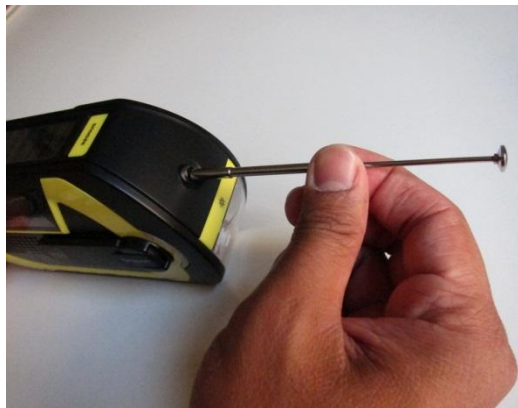

- 1) Remove the battery cover located on the back of the radio.
- 2) Insert the white tip of the rechargeable battery into the radio's connector.
- 3) Insert three AAA batteries
- 4) Reinstall battery cover.
- 5) Extend the telescoping antenna to enhance radio reception.

# WR202 Weather Radio Setup



- 1) To recharge the batteries, locate the battery selector on the back of the radio underneath the silicone cover. The selector is below the USB port.
- 2) Make sure the selector is slid to the far right.
- 3) Continuously rotate the hand crank arm for at least one minute.

# WR202 Weather Radio Setup

## Setting time and date



- 1) Press and hold the mode button to change the time and date.
- 2) Press the up and down keys to change each setting and press the Mode button to confirm each setting.



# WR202 Weather Radio Setup

## Activating the NOAA Weather Radio



- 1) Make sure your radio is adequately charged by turning the hand crank arm for at least one minute.
- 2) The National Weather Service uses one of seven preset frequencies to broadcast information in your area. To find the strongest station in your area, press the NOAA button on your radio and use the + and – buttons to find the best channel in your area.
- 3) Adjust the volume using the VOLUME knob located on the left side of the radio. Twist up to increase volume or twist down to decrease volume.
- 4) Once you find the correct frequency, press the NOAA button again to place the radio on STANDBY mode. This keeps the radio silent until the alerts and/or weekly test alerts are sent to your area. The “NOAA” sign on the LCD will blink continuously to remind you that it’s on STANDBY mode.

## Activating the NOAA Weather Radio

- If you have concerns about whether you found the right weather band channel for your location, you can get more information in the following locations:
  - National Weather Service Phone Number: 1-888-697-7263
  - National Weather Service Website: [www.nws.noaa.gov/nwr/indexnw.htm](http://www.nws.noaa.gov/nwr/indexnw.htm)
    - Click the state for which you need information, and find the frequency for your selected county location. Refer to the table in the manual for questions on how frequencies relate to the channels on your radio
- Be sure you are in an optimal area for reception: As with any AM or FM radio station, many things can affect the reception of your specific radio. Please test different spots in your location to find a place with a clear signal.
- To be certain you are using the right channel and mode on your radio: listen for the weekly test on your local National Weather Service channel. This typically occurs Wednesdays between 10AM and Noon local time. If you receive these alerts, you would have received any emergency alerts for your area.

# WR202 Weather Radio Setup

## Using the AM/FM Radio



- 1) Make sure your radio is adequately charged by turning the hand crank arm for at least one minute.
- 2) Press the RADIO button on the left hand side of the radio. This will activate the AM radio stations.
- 3) Adjust the volume using the VOLUME knob located on the left side of the radio. Twist up to increase volume or twist down to decrease volume.
- 4) Press and hold the – or + button to auto-seek a radio station. Press and release the – or + button to manually scroll through each frequency.
- 5) Press the RADIO button again to activate the FM stations. Repeat step 4 to search for your FM radio station of choice.
- 6) Press the RADIO button again to turn off the AM/FM radio stations.

# WR202 Weather Radio Setup

## Charging a cell phone



- 1) Remove the silicone cover on the back of the radio to expose the USB port.
- 2) Right below the USB port there is a charging selector that should be slid to the far left.
- 3) Connect the USB cable to the USB port on the radio and to your cell phone.
- 4) Continuously rotate the hand crank arm to start charging your cell phone.